





INJECTOR AND IGNITION MODULE PIN CONNECTIONS

INJECTOR PLUGS

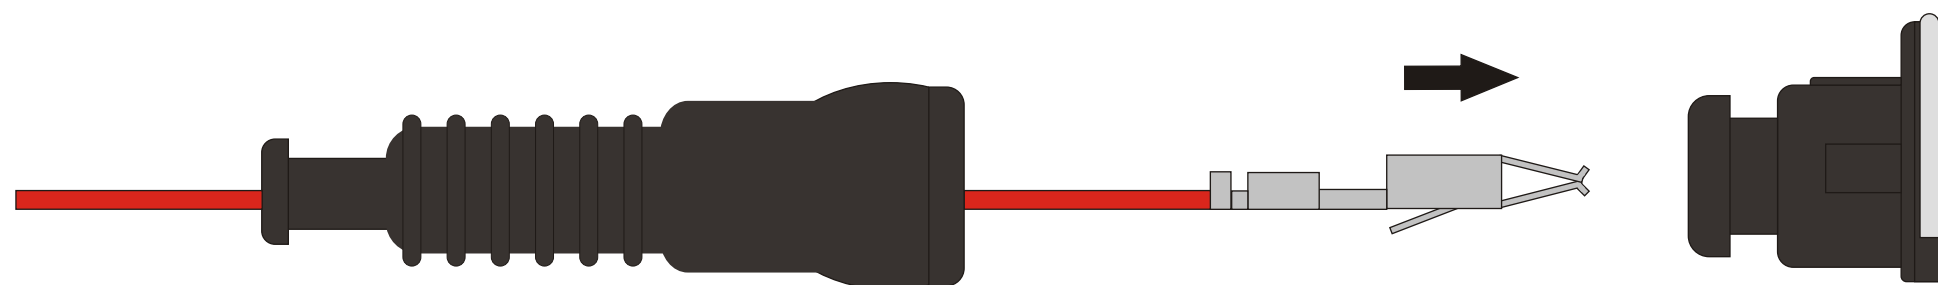

FEED WIRE THROUGH BOOT,
CRIMP PIN TO WIRE AND THEN INSERT INTO BACK OF PLUG

IGNITION MODULE PLUGS

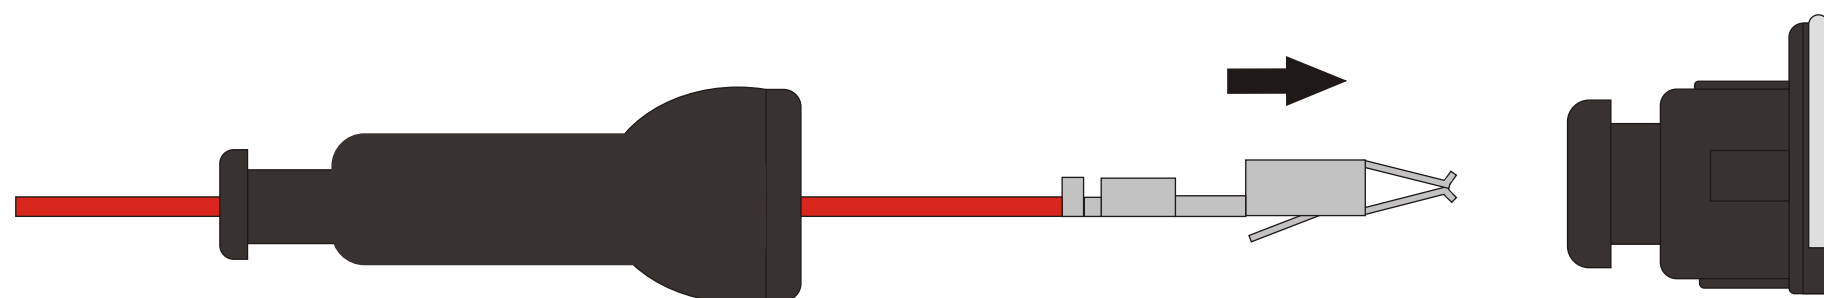

FEED WIRE THROUGH BOOT,
CRIMP PIN TO WIRE AND THEN INSERT INTO BACK OF PLUG