


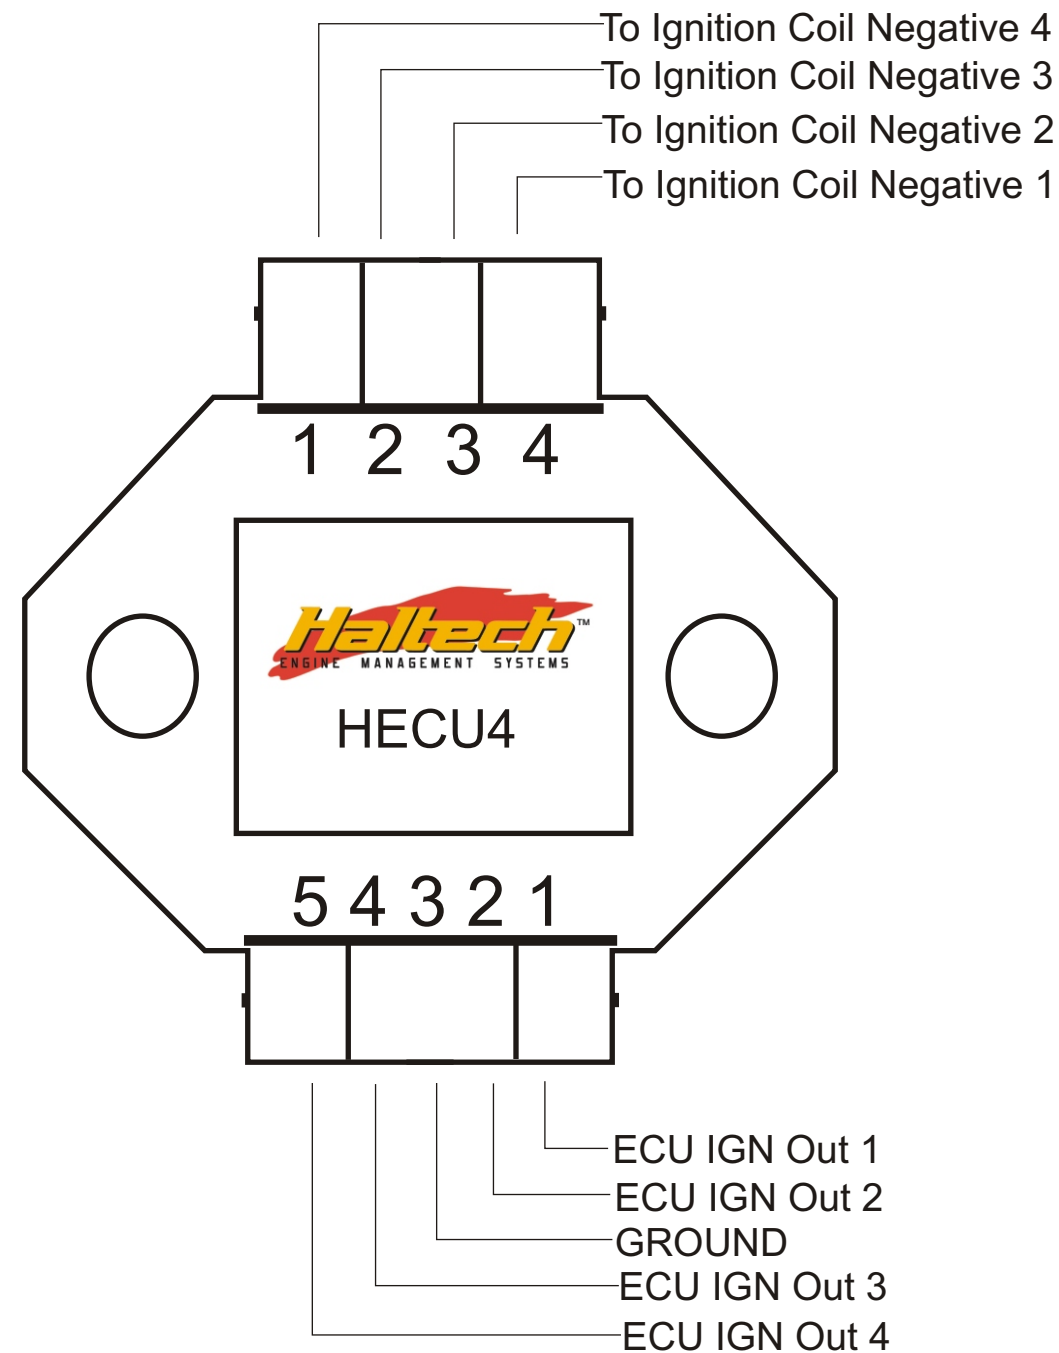

HALTECH QUADRUPLE CHANNEL IGNITION MODULE ECU DWELL



IGNITION SETUP

OUTPUT TYPE : CONSTANT CHARGE


OUTPUT EDGE : FALLING

*OUTPUT TYPE MUST BE SET TO CONSTANT CHARGE BEFORE CONNECTING THE IGNITOR. FAILURE TO DO SO MAY DAMAGE THE IGNITOR

*IF USED WITH DIRECT FIRE, SPARK MODE MUST BE SET TO DIRECT FIRE BEFORE CONNECTING IGNITOR. FAILURE TO DO SO MAY DAMAGE THE IGNITOR AND / OR IGNITION COILS.

*IGNITOR MUST BE MOUNTED TO SUITABLE HEAT SINK. THERMALLY CONDUCTIVE PASTE MUST BE USED.

IGNITION MODULE PLUG

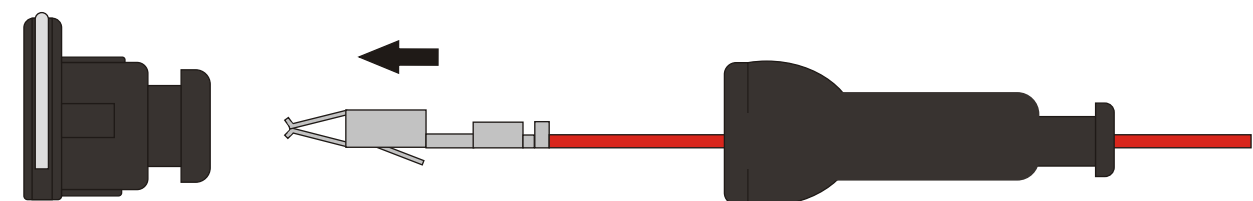

FEED WIRE THROUGH BOOT,
CRIMP PIN TO WIRE AND THEN INSERT INTO BACK OF PLUG