


TEMPERATURE SENSORS PIN CONNECTION

AIR TEMPERATURE SENSOR

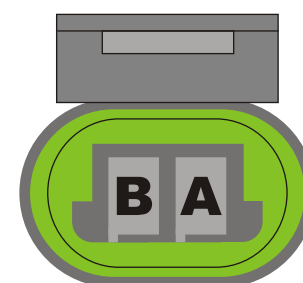

LOOKING INTO FRONT OF CONNECTOR

Termination	
A	Ground
B	Signal

INSERT WIRE THROUGH PLUG, THEN CRIMP THE PIN ONTO THE WIRE
DRAW BACK TO LOCK

COOLANT TEMPERATURE SENSOR



LOOKING INTO FRONT OF CONNECTOR

Termination	
A	Ground
B	Signal

INSERT WIRE THROUGH PLUG, THEN CRIMP THE PIN ONTO THE WIRE
DRAW BACK TO LOCK