PLUG 'N' PLAY ADAPTER HARNESS FOR NEXUS S3 ECU


SUPPORTED MODELS:
Subaru WRX MY06-10 (ADM)
Subaru WRX STI MY06-07 (ADM)

QUICK START GUIDE


HT-186370

9 356450 015400


ADAPTER HARNESS OVERVIEW

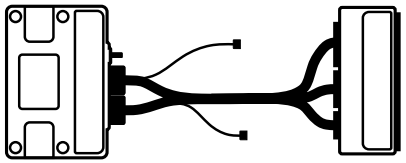

Nexus ECU with Plug 'N' Play adapter harness

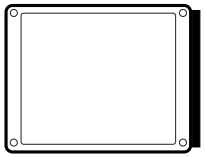

Example factory ECU

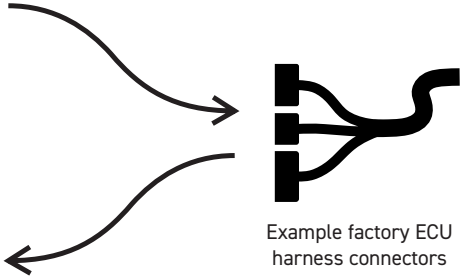

Example factory ECU harness connectors

Congratulations on your purchase of a Nexus Plug 'N' Play adapter harness for your vehicle. This vehicle-specific adapter harness enables you to seamlessly integrate a Nexus S3 ECU into your vehicle without the complexities of wiring an ECU. With this hassle-free solution, you can dive straight into tuning.

Nexus ECUs stand at the forefront of engine management systems, featuring cutting-edge technology and innovative features. Designed for the next generation of automotive enthusiasts and professionals, this state-of-the-art ECU seamlessly combines powerful engine control with a range of additional functionalities, making it a versatile and comprehensive solution for everyday driving to high-performance racing.


With full compatibility with a myriad of Haltech devices, it streamlines the configuration of engine parameters and additional functionalities, all programmable using a single piece of software.

What's in the box?

- HT-186370 - Subaru WRX MY06-10 (ADM) / WRX STI MY06-07 (ADM) Nexus Plug 'N' Play adapter box
- HT-130400 - Nexus S3 Plug 'N' Play adapter harness
- HT-010200 - Intake air temperature sensor (M14 x 1.5 thread)
- Quick Start Guide

Application Notes

- This Subaru WRX MY06-10 ADM / WRX STI MY06-07 ADM Nexus Plug 'N' Play adapter harness is compatible exclusively with a Nexus S3 ECU.
- Ensure that the correct basemap is uploaded into the ECU before powering the unit through the Plug 'N' Play adapter harness. Haltech will not be held responsible for engine damage due to the improper use of basemaps.
- Please note that the basemap serves as a starting point only, and the ECU will require appropriate tuning.
- Wideband O2 Sensor notes - A Haltech Wideband sensor is highly recommended for use with this product. This is because none of the factory O2 sensors are compatible with direct connection to the Nexus ECU. Additionally, the pre-turbo location is not ideal in a performance application. Wideband O2 sensors can significantly vary their readings with changes in exhaust pressure. Therefore, the Haltech wideband sensor must be located post-turbo but before the catalytic converter for accurate readings. Attempting to use the factory front O2 sensor or its location will result in highly inaccurate O2 sensor readings.
- Fuel pump control notes: The fuel pump relay control and fuel pump speed control are assigned to DP05 and DP02 in the basemap. However, for some models, the output assignments will need to be interchanged in the NSP software if the car stalls completely when the reverse lights or brake lights are activated.
- Mass Air Flow (MAF) sensor notes - If the MAF sensor is removed, the factory Air Temperature sensor is also removed with it. The Air Temperature sensor included in this product can be wired to Pin 4 (sensor ground) and Pin 2 (Air Temperature input) on the MAF connector to replace it.

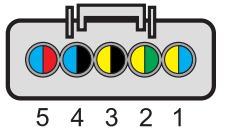

Mass Air Flow Connector
(Denso 197400-5111)
Wire Side View

NOTE: Please be advised that the wiring color and pinout information of the MAF sensor shown above has been derived from a 2009 Subaru WRX (ADM) and is subject to change across different variants.


Jumper ID Settings

This Subaru WRX Plug 'N' Play adapter harness is capable of being configured for use across a range of vehicles, such as the Subaru WRX MY06-10 ADM, or the Subaru WRX STI MY06-07 ADM.

Inside the adapter box, there is a jumper header with labels next to them, labeled A, B, C, and D. These jumpers are factory-set to suit a Subaru WRX MY06-07 ADM or WRX STI MY06-07 ADM application. These jumper settings must be changed to use this product with MY08-10 variants. To access and change the jumpers, the front plate needs to be unscrewed to allow the PCB to slide out. The jumper settings for various configurations are shown below for reference.


JUMPER CONNECTIONS	
A	MY08-10 Sec. Air Comb. Valve Relay 1 to IGN7
B	MY06-07 Sec. Air Comb. Valve Relay 1 to IGN7
C	MY06-07 Sec. Air Comb. Valve Relay 2 to IGN7
D	MY08-10 Sec. Air Comb. Valve Relay 2 to IGN7

Default Jumper Configuration
Subaru WRX MY06-07 & WRX STI MY06-07 (ADM)



Jumpers required:
B and C

Alternate Jumper Configuration
Subaru WRX MY08-10 (ADM)



Jumpers required:
A and D

Uploading the correct basemap


Your Nexus ECU can communicate with a laptop in low power mode using just a USB cable connection. This feature enables you to upload the basemap without powering the ECU through the Plug 'N' Play adapter harness. This ensures that all the ECU inputs and outputs are configured specifically for your engine before powering the vehicle up.


To upload the correct basemap into your Nexus ECU, follow these general steps:

1. Install/Open Haltech NSP: Haltech Nexus Software Programmer (NSP) is the software tool for configuring and tuning your Nexus ECU. Download and install NSP from the Haltech website to your Windows laptop if you haven't already done so. Instructions on how to install the software are available in the quick start guide that came with your Nexus ECU.

2. Connect to the ECU: Use the included USB-A to USB-C interface cable to connect your laptop to the Nexus ECU.

3. Upload the Basemap: Once connected, initiate the upload process by clicking on the File Menu, then click on Import/Upload, then navigate to the Haltech basemaps folder. Typically, this will be in Documents > Haltech > Nexus Maps and Data Logs > Base Maps. Choose the correct basemap file for your application as shown in the next page, then click Open.

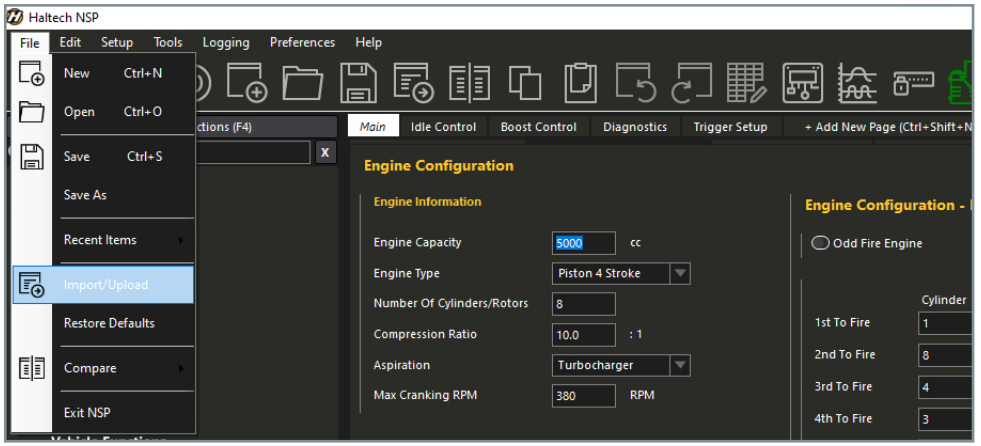

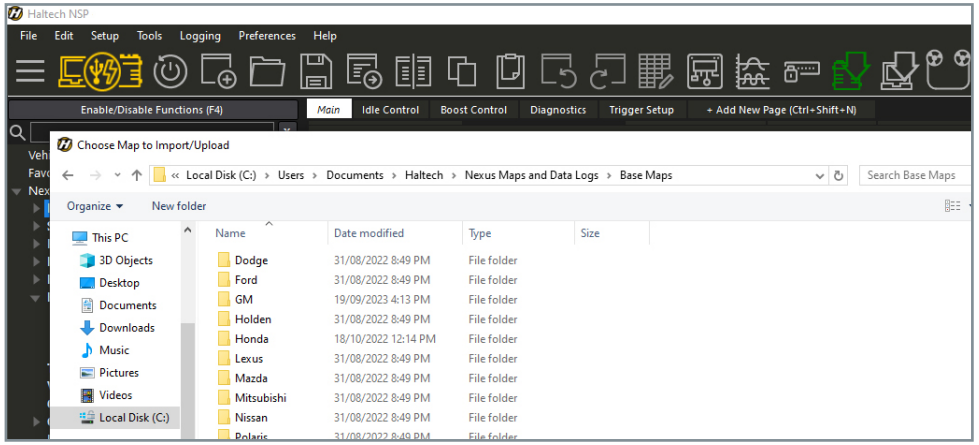


4. Upload All Settings: After opening the file, the NSP software will give you the option to upload specific parts of the map or to upload all the settings. Click on "Upload All" to copy all the base settings to your Nexus ECU. After NSP writes all the settings, click on the Reboot button to reinitialize the ECU.

5. Configure Application-Specific Settings: If you are using non-standard components on your engine, you will need to reconfigure the Nexus ECU to suit before connecting the unit to the Plug 'N' Play adapter harness and powering up the vehicle. These may include changing injector sizes/flow rates, adjusting ignition coil settings, or reconfiguring the trigger settings to match an aftermarket trigger kit.

6. Setup the Internal Jumpers: Some adapter boxes feature internal jumpers that you can set to suit specific vehicle models. If you need to change the jumper settings beyond the default configuration, open up the adapter box and follow the instructions provided in the previous section.

At this stage, the Nexus ECU and Plug 'N' Play harness are now ready to be installed into the vehicle for the initial start-up.

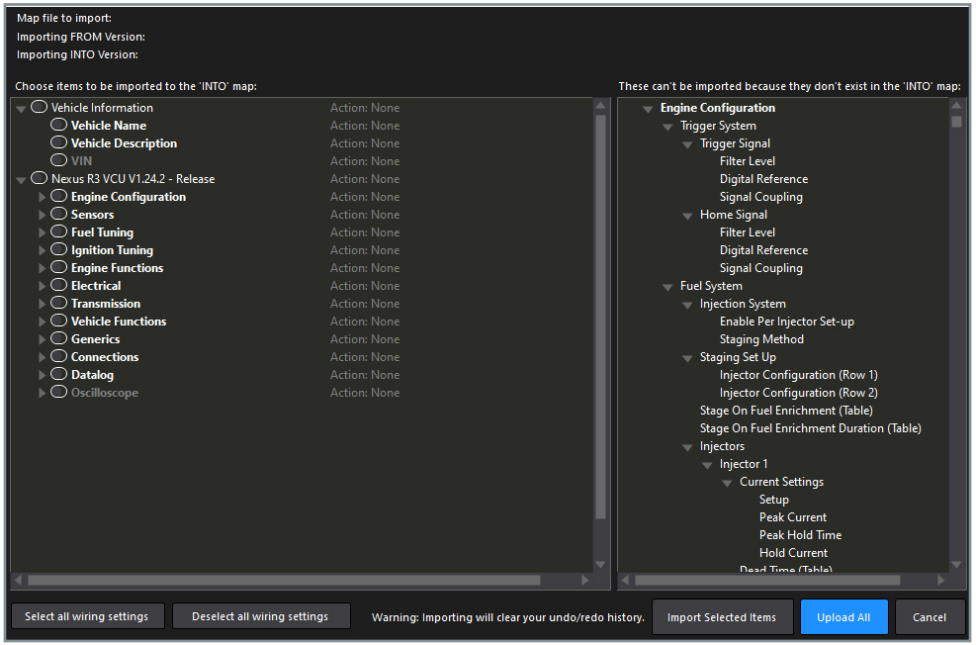


Wideband Oxygen Sensor


A Wideband Oxygen Sensor is a valuable tool for tuning your engine, as it measures a wide range of Air-Fuel Ratio (AFR) values that the engine operates within.

The Nexus S3 ECU supports onboard wideband oxygen sensor control, specifically designed for Bosch LSU 4.9 or NTK wideband sensors, which can be selected through the NSP software.

The adapter harness is equipped with a Deutsch DTM-6 connector, allowing direct connection to the Haltech Wideband Hardware packs shown below (sold separately).

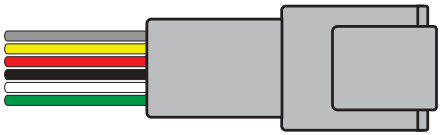

Wideband Connector (DTM04-6P)

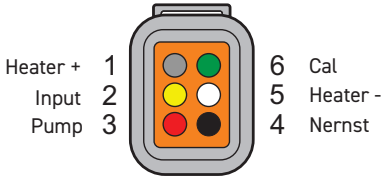

(Wire side view)


In addition to tuning, you can configure the Nexus ECU to adjust fueling to actively target the desired AFR (i.e. O2 control), or implement an engine protection strategy if the sensor detects that the engine is running too lean.



HT-010746 - Bosch LSU4.9
Wideband Hardware Pack



HT-010747 - NTK LZA08-H5
Wideband Hardware Pack

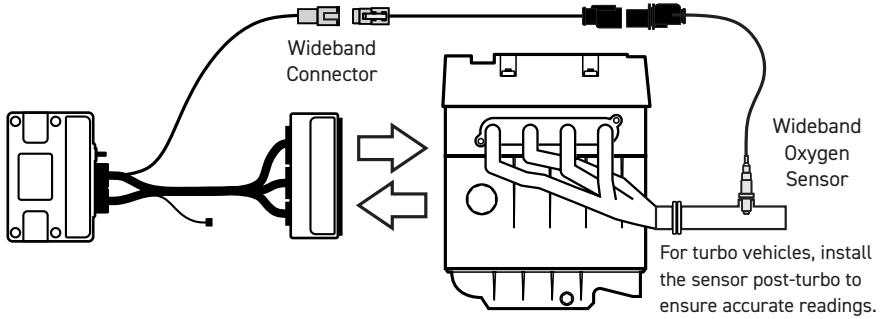


Example diagram showing how to directly connect and install a Bosch LSU4.9 Wideband Oxygen Sensor.


Haltech CAN System

The Nexus S3 ECU adapter harness is fitted with a DTM-4 CAN connector labelled as "CAN 1", which can be utilized with a range of Haltech CAN expansion products.


The diagram below illustrates example connections to multiple Haltech CAN devices (sold separately) or to a CAN WB1 / WB2 wideband module which requires external power.

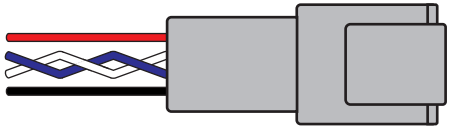

Haltech CAN 1 Connector (DTM04-4P)



(Wire side view)

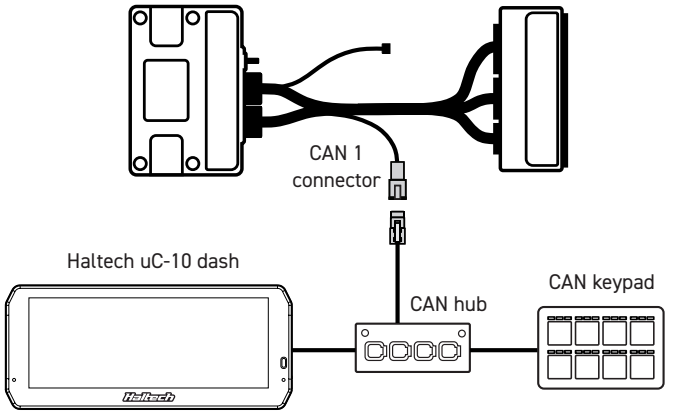

Example Haltech CAN devices





Air Temperature Sensor

An air temperature sensor is a crucial component used in Volumetric Efficiency (VE) tuning to compensate for changes in air density caused by temperature variations.




Cold air, being denser than warm air, requires more volume of fuel to maintain the same air-fuel ratio. With this information available, the Nexus ECU can automatically adjust fuel delivery based on temperature changes using the signal received from the air temperature sensor.

While many vehicles include a factory air temperature sensor, it is often located within the Mass Air Flow (MAF) sensor assembly or integrated into the intake air manifold. Typically, performance applications involve the removal of the MAF sensor or even changing the entire intake manifold. In such cases, an air temperature sensor (HT-010200) is provided as a replacement for the factory sensor.

Mounting the included sensor in the optimal position is crucial to accurately measure the air temperature entering the combustion chamber. Typically, a good location is just before the throttle body and after a turbocharger/intercooler if using forced induction. It's essential for the sensor to be in the moving air stream for rapid response times and to minimize heat soak effects. Caution must be exercised when mounting the sensor directly into the inlet manifold, especially at the rear, as this may lead to heat soak issues, where the sensor reads the manifold temperature rather than the air moving through it.

Once a suitable position is identified, a hole must be drilled and tapped to accommodate the sensor. A weld-on bung may also be used if necessary. It's recommended to remove the air intake pipe or relevant intake hardware when installing the sensor to prevent metal shavings from entering the engine.

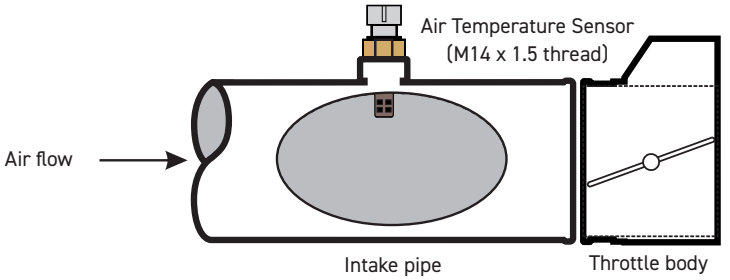

Example installation location of the included air temperature sensor


Included in this package is an air temperature sensor (HT-010200), which can be wired using the factory air temperature sensor wiring or a spare AVI or SPI, along with a signal ground connection available in the 16-pin Auxiliary connector at the rear of the adapter box. These sensors are not polarity sensitive, so either pin can be wired to either wire.



ECU Internal MAP Sensor (4 Bar)


The basemaps provided with this product will either utilize the factory MAP sensor, if the vehicle is equipped with one from the factory, or utilize the Nexus S3 ECU's Internal MAP sensor. You can check this in the software settings under Sensors > Manifold Pressure > Wiring > Input Type to see which one is being used.

If the ECU internal MAP sensor is selected, a vacuum hose must be connected from the ECU's MAP sensor barb to a vacuum port on the engine's intake manifold. This onboard sensor is a 4 Bar MAP sensor capable of reading vacuum and boost pressures up to 43.5 psi. No user calibration is necessary for this sensor.

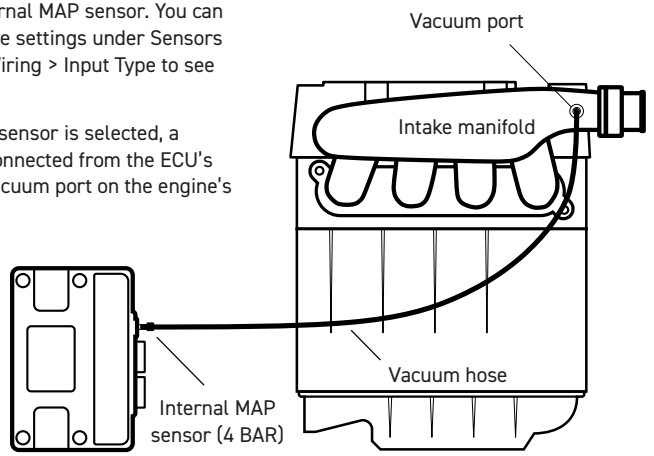


ECU location

The factory Subaru WRX MY06-10 and WRX STI MY06-07 ECU is located behind the passenger side foot well. Removal of the panel allows the installation of this Haltech Plug 'N Play product. Below is a generic illustration for reference.

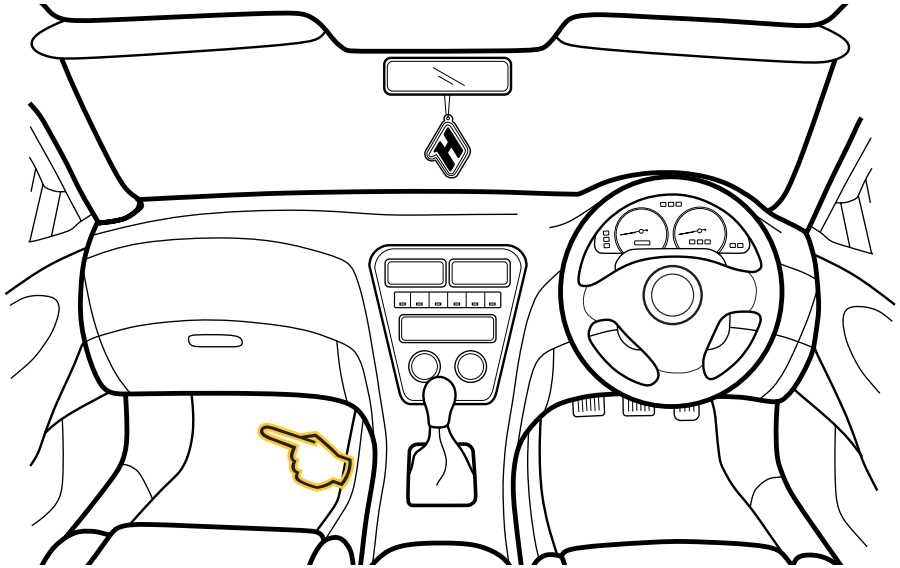


Vehicle connector:

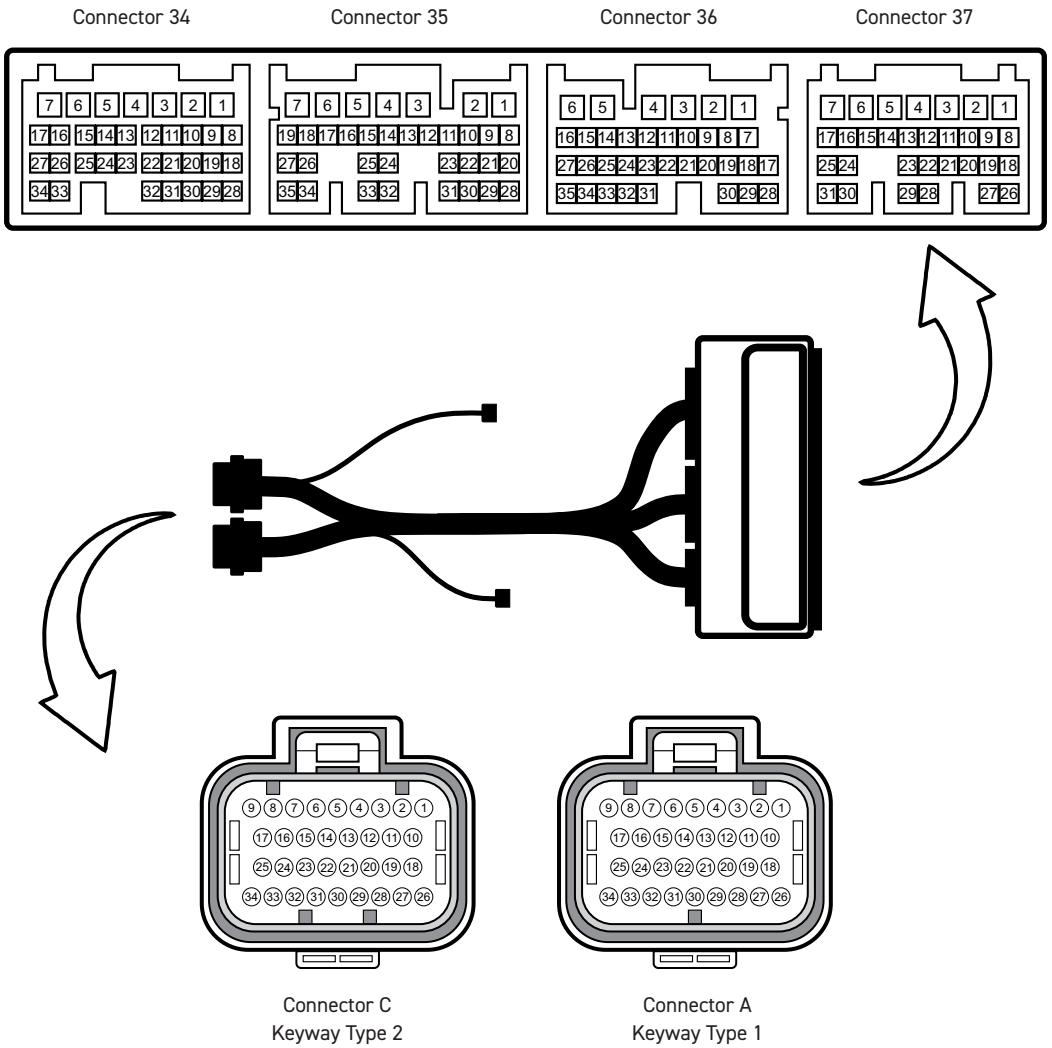

All connectors above are shown with reference to the pin side (front of connectors).

NEXUS S3 ECU CONNECTOR A (KEYWAY TYPE 1)				
Pin	**Function**	**Colour**	**Vehicle connector**	**Function**
A1	Injector 1	Blue	3708	Injector 1
A2	Injector 2	Blue/Black	3709	Injector 2
A3	Injector 3	Blue/Brown	3710	Injector 3
A4	Injector 4	Blue/Red	3711	Injector 4
A5	Injector 5	Blue/Orange	3618	Thermofan 1
A6	Injector 6	Blue/Yellow	3629	Thermofan 2
A7	Injector 7	Blue/Green	3714	VTC solenoid (LH)
A8	Injector 8	Blue/Violet	3716	VTC solenoid (RH)
A9	DPO 1	Violet/Black	3622	Tachometer
A10	Battery ground input	Black	Reserved for shield	Reserved for shield
A11	Battery ground input	Black	3726,3707,3706,3703,3702,3701,3615	Power ground
A12	DPO 2	Violet/Brown	3612	Fuel pump relay / control module
A13	Ignition switch input	Pink	3519	Ignition switch
A14	DPO 3	Violet/Red	3609	A/C control relay
A15	DPO 4	Violet/Orange	3611	Check engine light
A16	DPO 5	Violet/Yellow	3533	Fuel pump relay / control module
A17	DPO 6	Violet/Green	3607	Purge valve 2 (MY08-10)
A18	+12V switched input	Red	3717, 3715, 3712, 3502, 3407	+12V power from ECR
A19	HBO 1	Brown/Black	3704	DBW M-
A20	HBO 2	Brown/Red	3705	DBW M+
A21	HBO 3	Brown/Green	3729	Purge valve 1
A22	HBO 4	Brown/Pink	3503	Cruise control set light
A23	CAN 1 H	White	CAN connector Pin 3	Haltech CAN devices (See page 7 for details)
A24	CAN 1 L	Blue	CAN connector Pin 4	
A25	+12V switched input	Red	3717, 3715, 3712, 3502, 3407	+12V power from ECR
A26	ECR output	Black/Red	3623, 3620	Main relay / Starter enable relay
A27	Ignition 1	Yellow/Black	3718	Ignition 1
A28	Ignition 2	Yellow/Red	3719	Ignition 2
A29	Ignition 3	Yellow/Orange	3720	Ignition 3
A30	Ignition 4	Yellow/Green	3721	Ignition 4
A31	Ignition 5	Yellow/Brown	3723	TGV control
A32	Ignition 6	Yellow/Blue	3727	Boost control solenoid
A33	Ignition 7	Yellow/Violet	3630, 3619 (MY06-07) 3515, 3514 (MY08-10)	Secondary air comb valve 1 and 2 Secondary air comb valve 1 and 2
A34	Ignition 8	Yellow/Gray	3608	Secondary air pump relay


Vehicle connector:

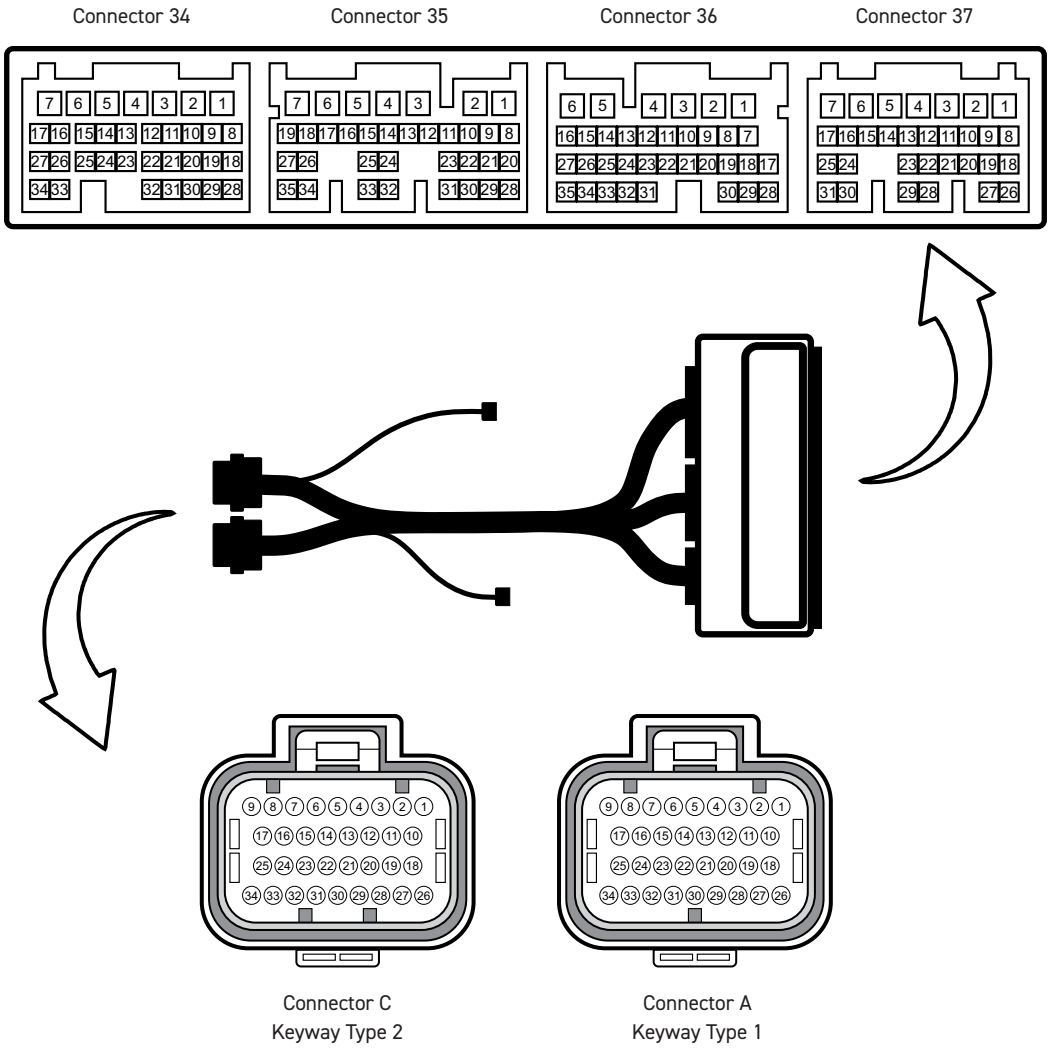

All connectors above are shown with reference to the pin side (front of connectors).

NEXUS S3 ECU CONNECTOR C (KEYWAY TYPE 2)				
Pin	**Function**	**Colour**	**Vehicle connector**	**Function**
C1	Trigger +	White	3413	Crank sensor +
C2	Trigger -	Black	3414	Crank sensor -
C3	Home +	White	3421	Cam sensor (LH)
C4	Home -	Black	No connection	No connection
C5	SPI 1	Gray/Brown	To auxiliary connector	Auxiliary IO
C6	SPI 2	Gray/Red	3411	Cam sensor (RH)
C7	SPI 3	Gray/Orange	3613	Vehicle speed sensor
C8	SPI 4	Gray/Yellow	3624	A/C request
C9	+8V	Orange/White	No connection	No connection
C10	AVI 1	White	3625	Clutch switch
C11	AVI 2	White/Yellow	3418	TPS 1
C12	AVI 3	White/Gray	3428	TPS 2
C13	AVI 4	White/Violet	3523	APP 1
C14	AVI 5	White/Green	3531	APP 2
C15	AVI 6	White/Orange	3520	Brake switch
C16	AVI 7	White/Black	3518	Air temperature
C17	AVI 8	White/Brown	3434	Coolant temperature
C18	AVI 9	White/Red	3406	MAP sensor
C19	SPI 5	No connection	No connection	No connection
C20	SPI 6	No connection	No connection	No connection
C21	CAN 2 H	White	3627	Vehicle CAN High *
C22	CAN 2 L	Blue	3635	Vehicle CAN Low *
C23	Knock 1	White	3415	Knock sensor
C24	Knock 2	White	No connection	No connection
C25	+5V	Orange	3522, 3521, 3419	Sensor power supply
C26	Signal ground	Black/White	3535,3534,3530,3529,3429,3501	Sensor ground
C27	AVI 10	Light Green	3512	Cruise control switch
C28	AVI 11	No connection	No connection	No connection
C29	WBI 1 Heater +	Gray	Wideband conn. Pin 1	Onboard wideband control (See page 6 for details)
C30	WBI 1 Input	Yellow	Wideband conn. Pin 2	
C31	WBI 1 Pump	Red	Wideband conn. Pin 3	
C32	WBI 1 Nernst	Black	Wideband conn. Pin 4	
C33	WBI 1 Heater -	White	Wideband conn. Pin 5	
C34	WBI 1 Cal	Green	Wideband conn. Pin 6	

* The Nexus ECU supports the CAN protocol specific to this vehicle. Always confirm your application selection in the Vehicle CAN drop-down list in the Connections section of the ECU settings. A complete list of supported CAN devices for each protocol available in the Nexus ECU can be found in the NSP software. Standard vehicle functions, including but not limited to ABS, ESC, and Traction Control, may not fully replicate OEM behavior. Use these features with caution.

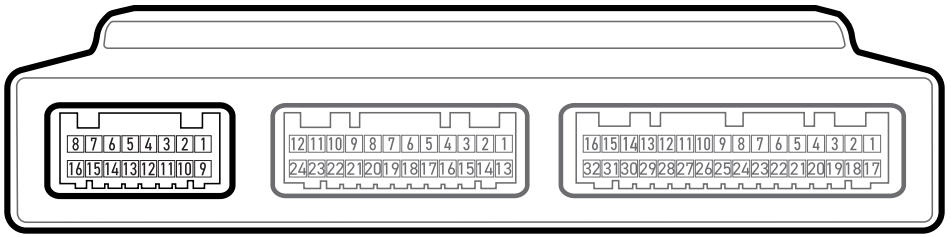

Auxiliary Connector

The 16-pin auxiliary connector located on the rear side of the adapter provides additional inputs and outputs that link to the Nexus ECU. The kit is supplied with spare pins that you can use if you need to connect to these additional I/Os. Use an appropriate crimping tool, such as the HT-070300.

Please refer to the pinout information below for details on the spare inputs and outputs available for this application.

AUXILIARY CONNECTOR (16 PIN)			
Pin	**Connection**	**Function**	**Notes**
1	From Nexus ECU (C25)	+5V	+5V DC sensor supply
2	No connection	No connection	No connection
3	Vehicle connector (3633)	** Optional connection	A/C pressure switch MY08-10
4	From Nexus ECU (C26)	Signal ground	Signal ground for sensors
5*	From Nexus ECU (A33)	Ignition 7	Secondary air comb valve 1 and 2
6*	From Nexus ECU (A34)	Ignition 8	Secondary air pump relay
7	From Nexus ECU (C5)	SPI 1	Spare input
8	From Nexus ECU (A18/A25)	+12V	+12V DC switched supply for relays and solenoids
9	From Nexus ECU (C25)	+5V	+5V DC sensor supply
10	Vehicle connector (3510)	** Optional connection	Fuel level signal
11	Vehicle connector (3631)	** Optional connection	Neutral position switch
12	From Nexus ECU (C26)	Signal ground	Signal ground for sensors
13	No connection	No connection	No connection
14*	From Nexus ECU (A8)	Injector 8	VTC solenoid RH (Vehicle conn. 3716)
15	Vehicle connector (3433)	** Optional connection	Power steering pressure switch
16	From Nexus ECU (A18/A25)	+12V	+12V DC switched supply for relays and solenoids

* These pins have a direct wired connection to the Nexus ECU. The rest of the pins on this auxiliary connector loop within the adapter box and back to the Nexus ECU through the 24- and 32-pin Tyco connectors.

** Optional connections - these are pins on the 16-pin auxiliary plug that have connections to the vehicle connector. On some models, these I/Os are available and can be connected to the Nexus ECU or through a CAN I/O expander for monitoring or data logging.

WARRANTY CERTIFICATE

At Haltech we make every effort to design and manufacture fault-free products that perform up to or above the market expectations. All our products are covered by a Limited 12 Month Warranty.

Haltech Limited Warranty

Unless specified otherwise, Haltech warrants its products to be free from defects in material or workmanship for a period of 12 months from the date of purchase.

If the Haltech product is found to be defective as mentioned above, it will be replaced or repaired if returned prepaid along with proof of purchase. Proof of purchase in the form of a copy of the original purchase invoice, receipt or bill of sale which indicates that the product is within the warranty period, must be presented to obtain warranty service.

Replacement or repair of a defective product shall constitute the sole liability of Haltech. To the extent permitted by law, the foregoing is exclusive and in lieu of all other warranties or representations, either expressed or implied, including any implied warranty of merchantability or fitness. In no event shall Haltech, be liable for special or consequential damages.

Product Returns

Please include a copy of the original purchase invoice, receipt or bill of sale along with the unused, undamaged product and its original packaging. Any product returned with missing accessory items or packaging will incur extra charges to return the item to a re-saleable condition.

All product returns must be sent via a freight method with adequate tracking, insurance and proof of delivery services. Haltech will not be held responsible for product returns lost during transit.

Returns of Products Supplied in Sealed Packaging

The sale of any sensor or accessory supplied in sealed packaging is strictly non-refundable if the sealed packaging has been opened or tampered with. This will be clearly noted on the product packaging. If you do not accept these terms please return the sensor in its original unopened packaging within 30 days for a full refund.

A sensor or accessory product may be returned after 30 days of purchase (with its sealed packaging intact) for credit only (no refunds given) and will be subject to a 10% restocking fee.

Installation of Haltech Products

No responsibility whatsoever is accepted by Haltech for the fitment of Haltech Products. The onus is clearly on the installer to ensure that both their knowledge and the parts selected are correct for that particular application. Any damage to parts or consequential damage or costs resulting from the incorrect installation of Haltech products are totally the responsibility of the installer.

Always disconnect the battery when doing electrical work on your vehicle. Avoid sparks, open flames or use of electrical devices near flammable substances. Do not run the engine with a battery charger connected as this could damage the ECU and other electrical equipment.

Do not overcharge the battery or reverse the polarity of the battery or any charging unit. Disconnect the Haltech ECU from the electrical system whenever doing any welding on the vehicle by unplugging the wiring harness connector from the ECU.

After completing the ECU installation, make sure there is no wiring left un-insulated. Uninsulated wiring can cause sparks, short circuits and in some cases fire. Before attempting to run the engine ensure there are no leaks in the fuel system.

All fuel system components and wiring should be mounted away from heat sources, shielded if necessary and well ventilated. Always ensure that you follow workshop safety procedures. If you're working underneath a jacked-up car, always use safety stands!

Haltech Off-Road Usage Policy

In many states it is unlawful to tamper with your vehicle's emissions equipment. Haltech products are designed and sold for sanctioned off-road/competition non-emissions controlled vehicles only and may never be used on a public road or highway.

Using Haltech products for street/road use on public roads or highways is prohibited by law unless a specific regulatory exemption exists (more information can be found on the SEMA Action Network website www.semasan.com/emissions for state by state details in the USA).

It is the responsibility of the installer and/or user of this product to ensure compliance with all applicable local and federal laws and regulations. Please check with your local vehicle authority before purchasing, using or installing any Haltech product.

08/2024



Haltech Australia
17 Durian Place,
Wetherill Park NSW 2164
Australia
Phone: +61 2 9729 0999
Email: aus@haltech.com

Haltech New Zealand
Grey Lynn Auckland, NZ 1021
Phone: 09 887 0616
Email: nz@haltech.com

Haltech USA East
750 Miles Point Way,
Lexington, KY USA 40510
Phone: (888) 298 8116
Email: usa@haltech.com

Haltech USA West
Race Winning Brands,
10800 Valley View Street,
Cypress, CA 90630
Phone: (888) 298 8116
Email: usa@haltech.com

Haltech UK
Unit 1, Miras Business Estate,
Keys Park Road, Hednesford,
WS12 2FS
Phone: +44 121 285 6650
Email: uk@haltech.com

Haltech Europe
Ottogasse 2A,
2333 Leopoldsdorf, Austria
Phone: +43 720 883968
Email: europe@haltech.com

facebook.com/HaltechEngineManagement
youtube.com/haltechecu
instagram.com/haltechecu